


 
### CP Plus Functions

 Adjust room temperature - Range: 40-86°F (5-30°C)



- Select energy mode
- a) LP gas
  - b) MIX 1\* - Electricity 850W + Gas
  - c) MIX 2\* - Electricity 1700W + Gas
  - d) EL\* - Electricity 850W
  - e) EL\* - Electricity 1700W


\*Truma Combi eco plus and comfort plus only




Adjust water temperature

- a) **boiler** – Hot water generator is on. Icon flashes until desired temperature is reached.
- b) **eco** – Water temperature is 104°F (40° C)
- c) **hot** – Water temperature is 140°F (60° C)
- d) **boost** – Boiler content is heated quickly (boiler priority) for up to 40 minutes. The water temperature is then kept at the higher level (about 144° F (62° C) for two subsequent heating cycles. When the water temperature is reached, the room is heated again.

### CP Plus Functions – Cont.

 Set clock to current time

 Set time switch  
Set a start time and end time for room temperature, water temperature, energy mode and fan speed set points.

 Settings

**Index** - Show version number of connected device

**Bright** - Adjust backlighting

 
**Lang** - Adjust language

**12-24h** - 12/24 hour mode

**Temp** – °F or °C

**Offset** – Calibrate temp offset

**Pr set** – Factory reset



Select fan speed

**OFF** – Fan is switched off (If furnace mode OFF)

a) **VENT** - Circulating air (If furnace mode OFF)

b) **ECO** - Low fan speed

c) **HIGH** – High fan speed

d) **BOOST** – Fast room heating. Available if the difference between the selected and current room temperature is >18° F (10° C)