


PRECISION CIRCUITS INC

The **ONE PLACE MONITOR PANEL** has three automatic learn features and it will learn:

1. If the Water and Waste Tanks have 1/3 or 1/4 increment sensors.
2. If a second Gray and/or second Blank Waste Tank exists.
3. If Water Heater Function exists.

Each feature above is learned independently, even for the individual Tanks.

Once a feature is learned, it is stored in non-volatile memory, and remembered even if Battery Power is removed from the Panel.

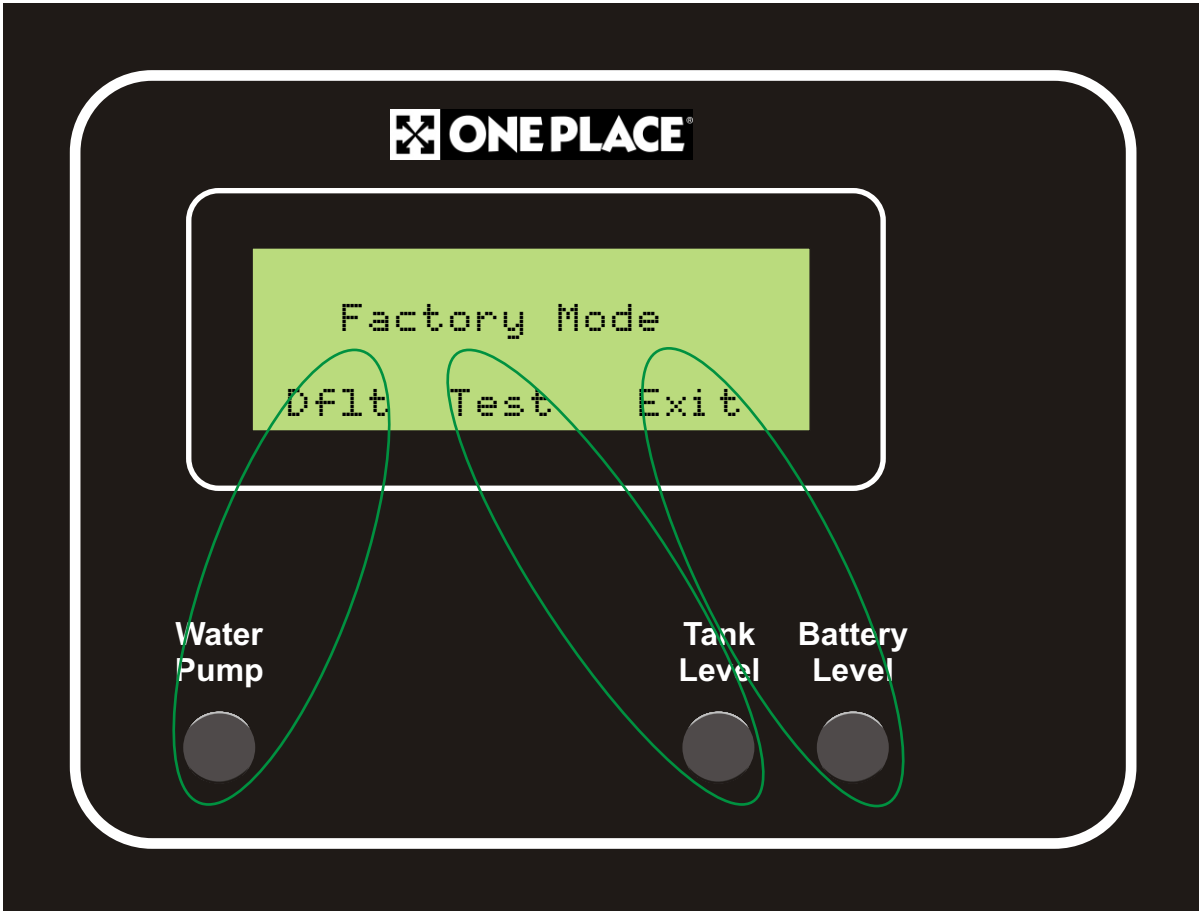

The **ONE PLACE MONITOR PANEL** has many safe guards to prevent improperly learning a feature. Should the Panel have learned something incorrectly, an option exists on the Panel to reset the original factory default, so that the Panel can re-learn the proper features.

To Reset the Panel to Default

1. Press and hold all three buttons shown above for approximately 6 seconds, until the above screen appears.
2. Press the Default Button (Water Pump)
3. Press the Exit Button (Battery Level).
4. The Panel will return to the Water Pump Display.