

**Crisper shelf removal for
R4500 Refrigerator**



Pull the aluminum bar towards yourself ½ inch.
Push down the crisper shelf, below bar.



While holding down the crisper shelf push the aluminum bar into the fridge using one hand and gently wiggle and remove end of bar from cabinet.



With the aluminum bar removed from the cabinet on both ends pull the crisper shelf straight out. It may need to be bowed a little to remove side pressure.


**Crisper Shelf Removal
for R3800 Refrigerator**



Pull aluminum bar ½ inch towards yourself. At the same time bow (bend) the crisper shelf up in the middle.



As you bow the crisper shelf up use your free hand to push away from the edge of the cabinet.

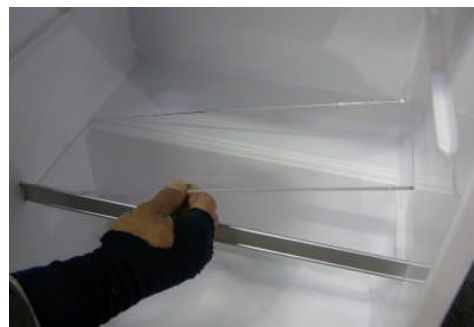

Lift crisper shelf up on free end and gently move out of support on other end